

Mounting Top Squeezers to the LD16




Remove these two dome nuts, screws and washers marked above on both sides of the head.



Place the squeezer bracket for that side of the head with the horizontal piece facing the exit of the machine. Replace the screws with the 16mm ones provided and tighten them only enough to hold the bracket in place.

Repeat for the other side of the head.

The final screws for the brackets are placed through the inside of the head of the LD16 out through the top hole in the bracket. Then a dome nut is used to hold this in place.

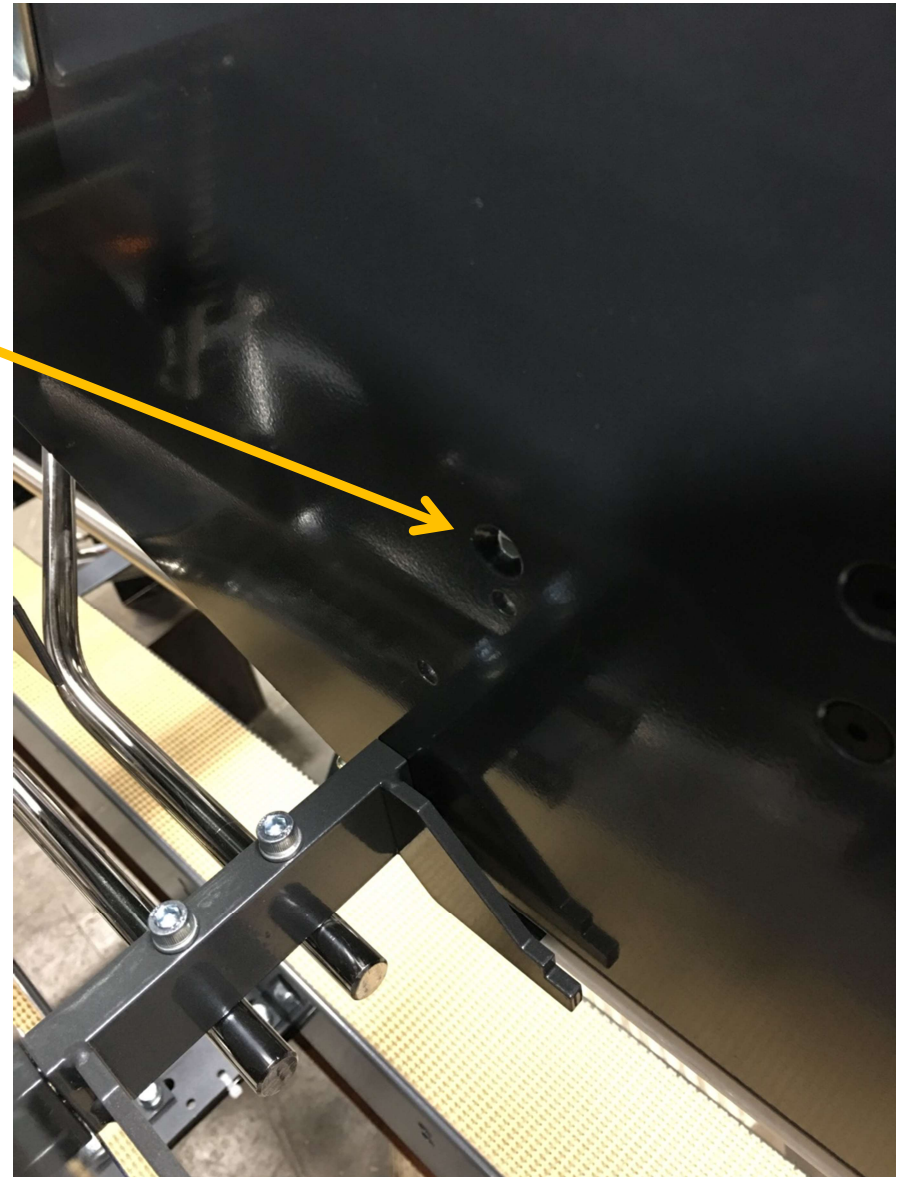



Now all fasteners can be tightened and the wheels can be adjusted to the proper width to close the box.

